



Parts

- A. 3 x Section 1
- B. 4 x Section 2
- C. 4 x Section 3
- D. 4 x Bolt
- E. 20 x Screws
- F. 1 x Hex Key

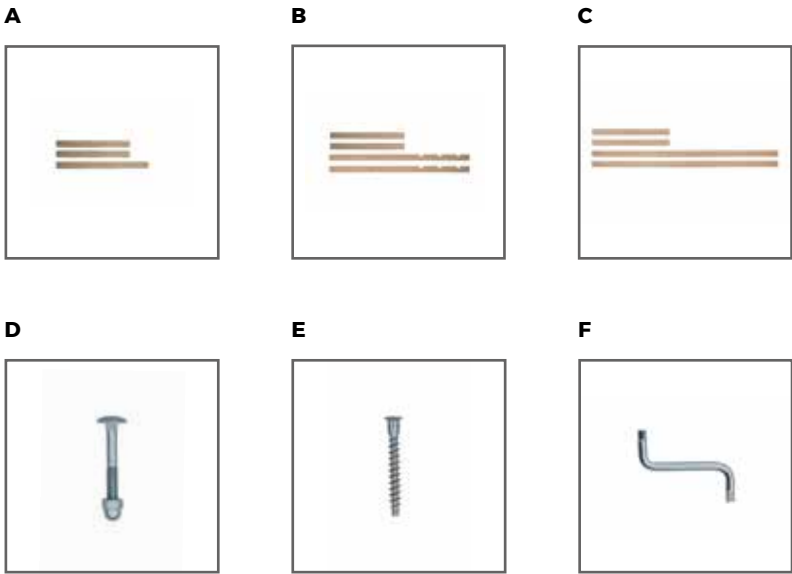

Technical Data - Deck Chair

Print Area

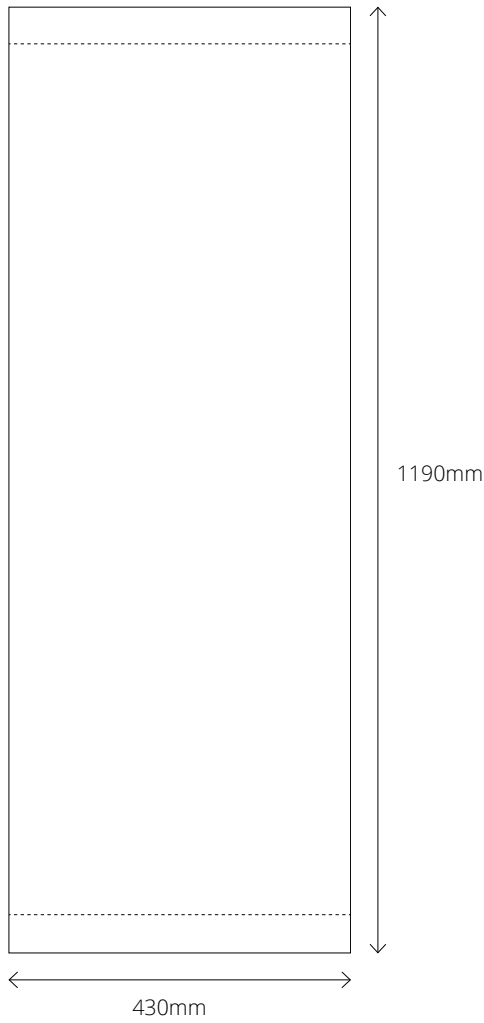

- Time Required**
< 20 mins
- People Required**
1 person
- Tools Required**
Hex Key



Assembly

Arrange the pieces for section 1 ensuring that the 2 holes in the lengths correspond to the 2 holes in the cross section. Secure in place using the screws provided. Do not over-tighten.

1



Arrange the pieces for section 2 ensuring that the 2 holes in the lengths correspond to the 2 holes in the cross section. Secure in place using the screws provided. Do not over-tighten.

2



Arrange the pieces for section 3 ensuring that the 2 holes in the lengths correspond to the 2 holes in the cross section. Secure in place using the screws provided. Do not over-tighten.

3



Arrange sections 2 and 3 as shown ensuring that the bolt holes are aligned. Place a bolt into the counter sunk hole from the inside of the frame and secure. Do not over-tighten the nut as this will stop the frame from opening and closing. Repeat this step for the other side of the frame.

4



Bolt section 1 to the frame using the remaining holes. Section 1 needs to be placed under section 3 for the mechanism to work.

5



Once the frame has been assembled remove the screws from the top of section 3 and slide the top fabric sleeve onto the crossbar. If applicable ensure graphics face the front. Repeat the process for section 2. Ensure the frame is stable before use.

6

