


Parts

- A.** 1 x Correx / Foamex
- B.** 2 x Cable Ties (Optional)

A

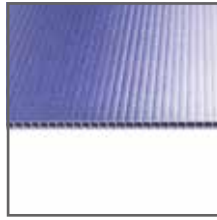

B





Correx / Foamex

Assembly

Position the board in the desired location.

1



Starting at the top from the back, thread a cable tie through the first hole in the sign board. Loop the cable tie back on itself and thread it through the second hole.

2



Fasten the cable tie together (to prevent any damage to the sign board, do not fasten the cable tie too tight). Repeat for the holes at the bottom.

3



Time Required
< 5 mins



People Required
1 person



Tools Required
None

HARRISON
FLAGPOLES | EDS | CREATIVE